


DNS-2640 Zone Configuration

Use "**devscan.exe**" to determine the Device Names to change the zone configuration

Enter: "**zonecfg.exe -device=Scsi(##,##,##) -zone=4**"

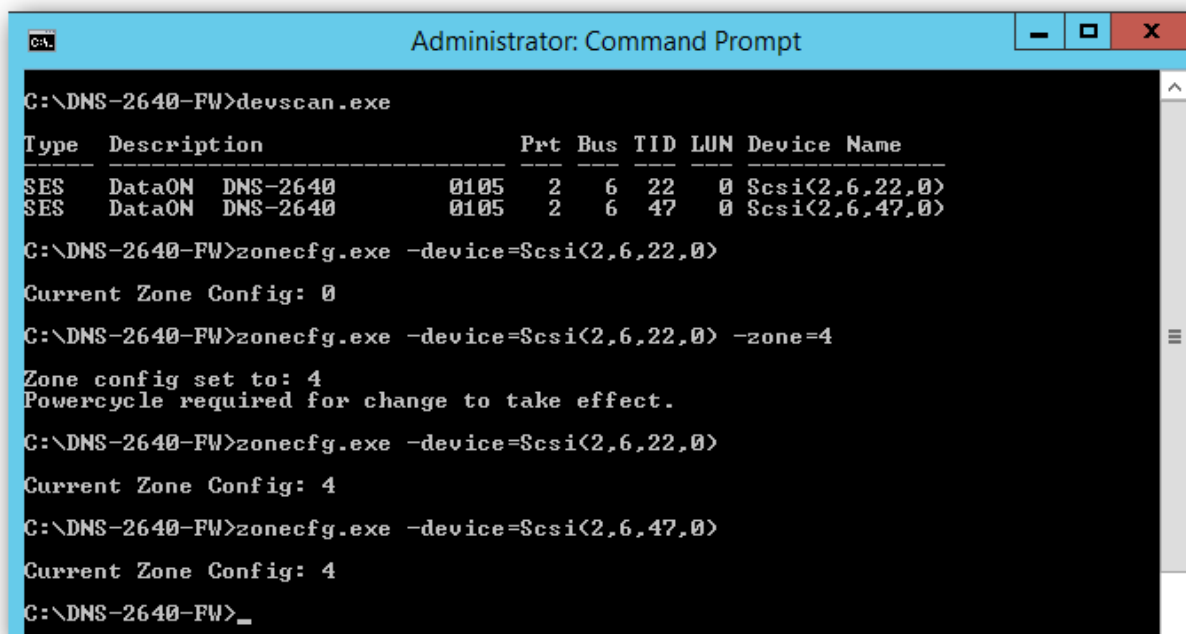

```
C:\DNS-2640-FW>devscan.exe

Type  Description                      Prt  Bus  TID  LUN  Device Name
-----
SES   DataON   DNS-2640                      0105   2    6   22    0  Scsi(2,6,22,0)
SES   DataON   DNS-2640                      0105   2    6   47    0  Scsi(2,6,47,0)

C:\DNS-2640-FW>zonecfg.exe -device=Scsi(2,6,22,0)
Current Zone Config: 0

C:\DNS-2640-FW>zonecfg.exe -device=Scsi(2,6,22,0) -zone=4
Zone config set to: 4
Powercycle required for change to take effect.

C:\DNS-2640-FW>zonecfg.exe -device=Scsi(2,6,22,0)
Current Zone Config: 4

C:\DNS-2640-FW>zonecfg.exe -device=Scsi(2,6,47,0)
Current Zone Config: 4

C:\DNS-2640-FW>_
```

Note

You will only need to choose one 'Device Name' to change the zone configuration; after the power-cycle, both IO modules will reflect the change