
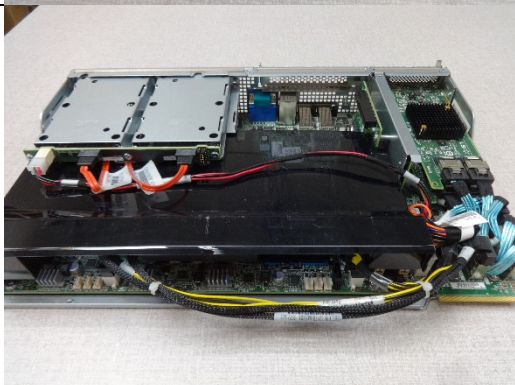

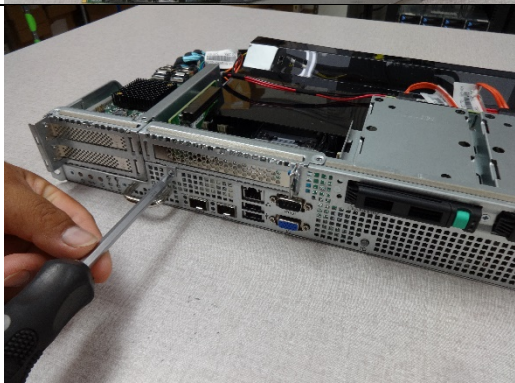


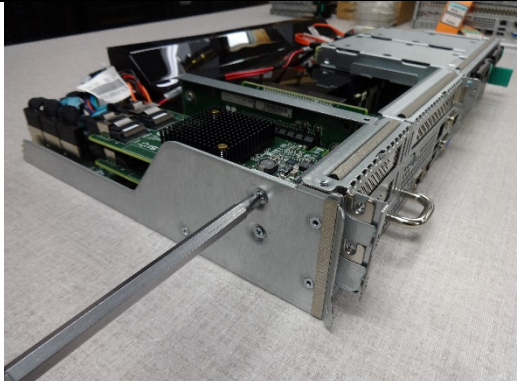
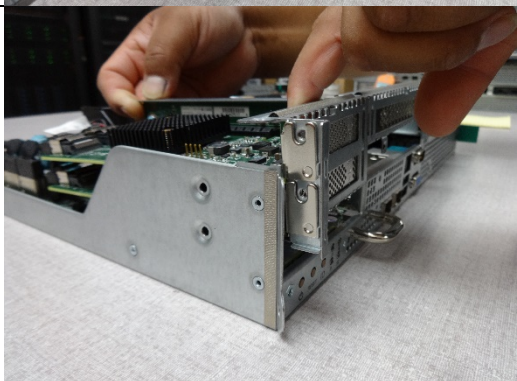
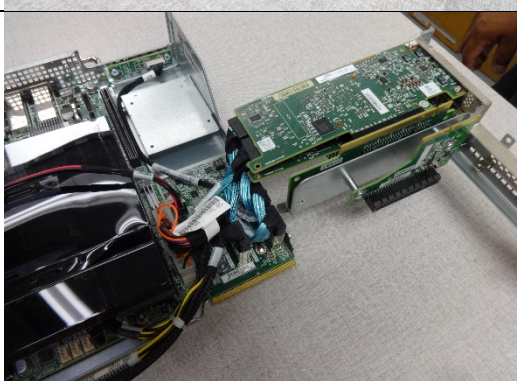
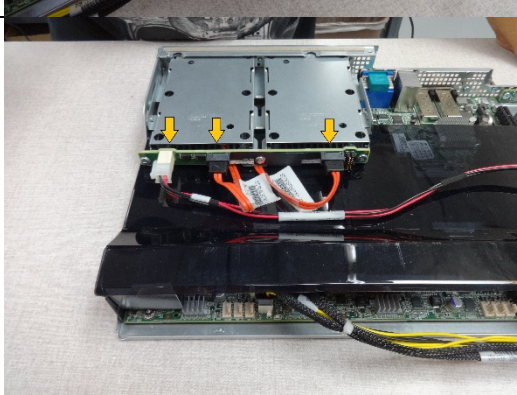
# CiB-9470 Installation

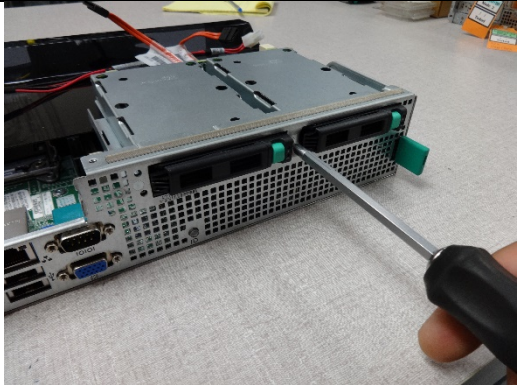
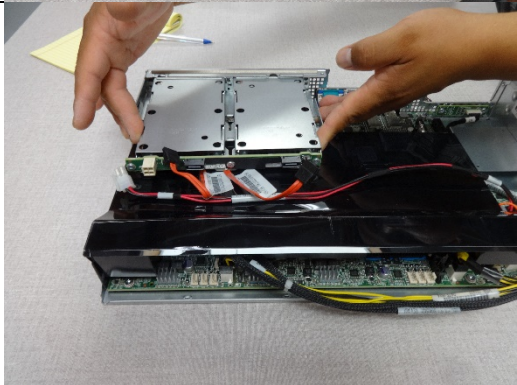
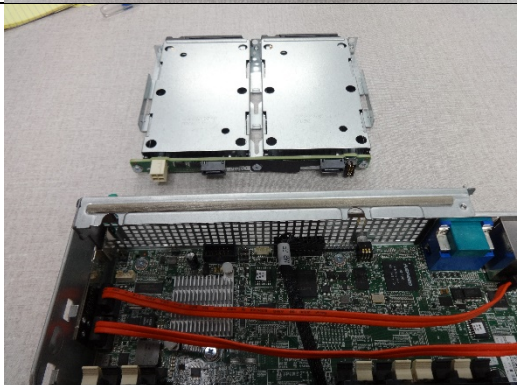

---

DataON

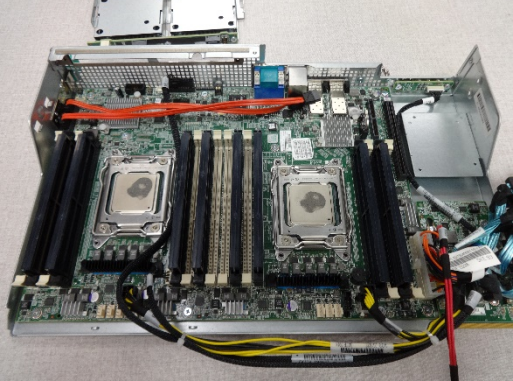
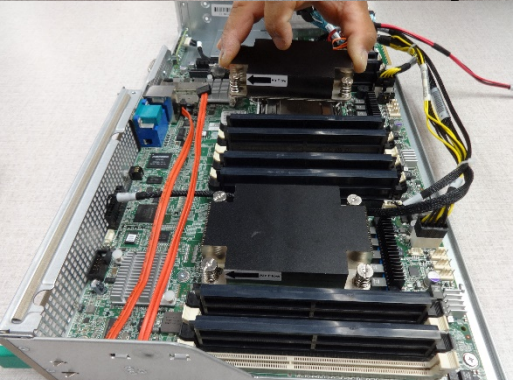

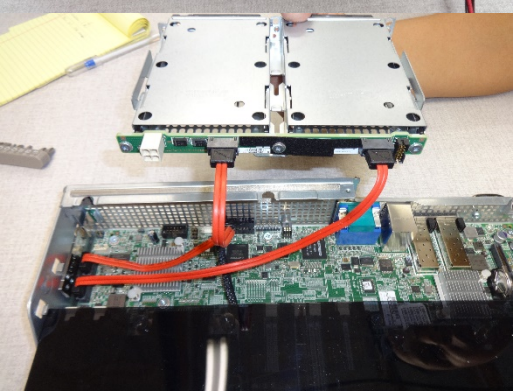
1247 N. LAKEVIEW AVE, SUITE C, ANAHEIM, CA 92807

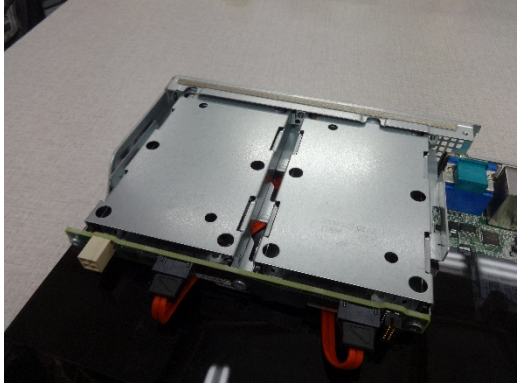
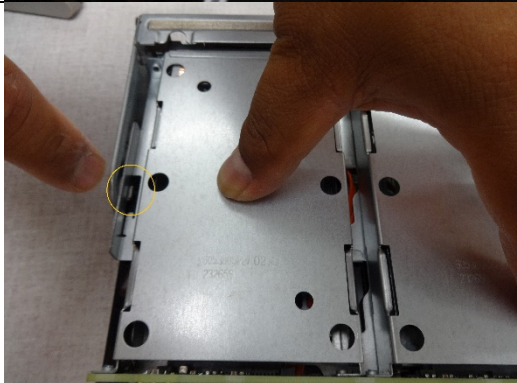
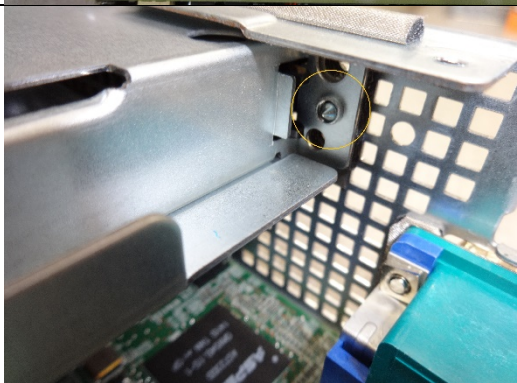
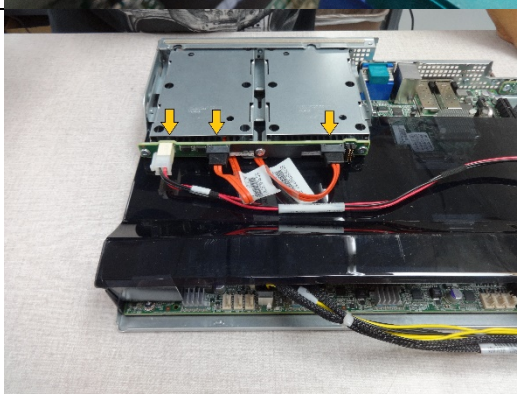
	CiB-9470 Node (Front)
	CiB-9470 Node (Back)
	<b>Unscrew 4 screws for take-out HBA Module- Screw 1</b>
	<b>Unscrew 4 screws for take-out HBA Module- Screw 2</b>

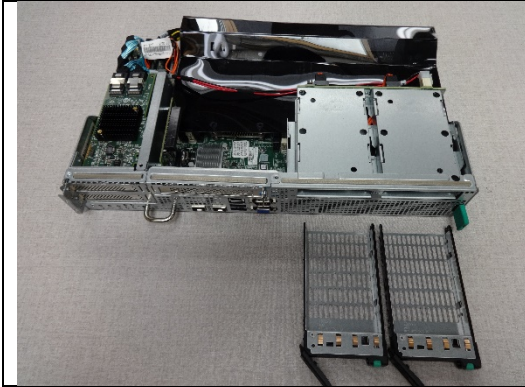
	<p><b>Unscrew 4 screws for take-out HBA Module-</b> Screw 3 &amp; 4 on site</p>
	<p>Pull up HBA Module</p>
	<p>Be careful pull up HBA Module, and let it on the site.</p> <p><b>**Please do not remove the cable connection (BLUE) **</b></p>
	<p>Remove 3 cable connection</p>

	Unscrew 1 screw
	Pull out boot drive Module (Image 1-2)
	Pull out boot drive Module (Image 2-2)
	Lift up the Air duct



	<p>Install CPU and Memory</p> <p><b>**CAUTION**</b> CPU socket are easy to damage, please install carefully.</p>
	<p>Install Heat-Sink</p> <p><b>**The Air-Flow arrow to the back **</b></p>
	<p>Put the Air duct back</p>
	<p>Boot Drive Module Installation</p> <p>Connect 2 SAS Cables</p> <p><b>**Cables should go to same connection as image. **</b></p>

	<p>Boot Drive Module Installation</p> <p>Install the Boot drive module.</p>
	<p>Boot Drive Module Installation</p>
	<p>Boot Drive Module Installation</p>
	<p>Connect 3 cables</p>



Install Boot Drives then finish!